

Installation inserts

User manual **English**



info@synpack.nl
www.synpack.nl



1. Disconnect the air tool from the air tube.



2. Screw off the back of the air tool.



3. Pull the black insert and the O-rings out of the air tool.




4. Take the supplied yellow insert out of the packaging.



5. Place the two O-rings on the yellow insert.



6. Put the yellow insert into the air tool.

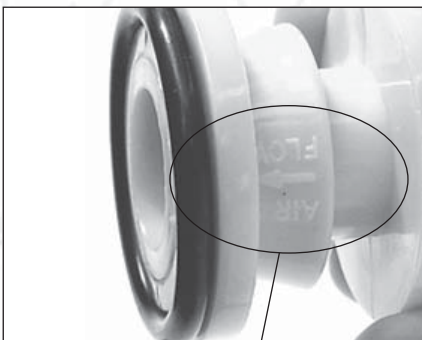

7. Attention! Place the insert in the air tool according to the arrow on the insert.



8. Screw the back of the air tool on the air tool.



9. Connect the air tool to the air tube again.



CARGO[®]
nothing does it better